



## TECHNICAL DATA

### ELECTRIC / PNEUMATIC RELEASE MODULE TRIM CHART

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058  
 Telephone: 269-945-9501 Technical Services 877-384-5464 Fax: 269-818-1680 Email: [techsvcs@vikingcorp.com](mailto:techsvcs@vikingcorp.com)

Available since 2004

For Use on Standard Trim	For Use on Brass* Trim
12661-1	12661-2
<b>NOTE:</b>	
Order Solenoid Valve and Pneumatic Actuator separately. Electric / Pneumatic Release Modules are for use with Viking Solenoid Valve Part Numbers 11593, 11594, 11601 and 11602, and Viking Model H-1 Pneumatic Actuator part number 06459B.	
<p>The Viking Electric / Pneumatic Release Module is for use on Viking Electric / Pneumatic Double Interlocked Preaction systems equipped with a Viking Deluge Valve. Verify that the valve is trimmed with Conventional Trim installed according to the current Conventional Trim Chart for the Valve used.</p> <p>Install the Electric / Pneumatic Release Module using the connections provided and as shown in Figure 1 on this page.</p>	
<p>*Standard Conventional Trim sets for Viking Deluge Valves consist of galvanized nipples and fittings.</p> <p>**Refer to Technical Data describing the Halar® Coated Deluge Valve and the Viking Foam Systems Engineering and Design Data book for applications where brass trim is recommended.</p>	
<b>ORDER DELUGE VALVE, TRIM, SOLENOID VALVE, AND RELEASE MODULE TRIM SEPARATELY.</b>	

**FIGURE 1: ELECTRIC/PNEUMATIC RELEASE MODULE**

**THIS PAGE INTENTIONALLY  
LEFT BLANK**