

DELUGE VALVE MODEL VXD

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

1 DESCRIPTION

The Viking Model VXD Deluge Valve is a flood valve with one moving mechanism. The Deluge Valve is used to control water flow in Deluge and Preaction sprinkler systems. The valve is held closed by system water pressure trapped in the priming chamber, keeping the outlet chamber and system piping dry. In fire conditions, when the releasing system operates, pressure is released from the priming chamber. The Deluge Valve diaphragm opens to allow water to flow into the system piping.

Features

- 1. Field replaceable diaphragm
- 2. Designed for installation in vertical position
- 3. Automatically resets without opening the valve
- 4. Compatible with Hydraulic, Pneumatic and Electric Release Systems

2 LISTINGS AND APPROVALS:



cULus Listed: Guide No. VLFT and VLFT7





FM Approved: Deluge Sprinkler Systems, Preaction Sprinkler Systems, Refrigerated Area Sprinkler Systems

3 TECHNICAL DATA

Specifications:

Available since 2021

Pressure Rating: 250 psi (17.2 bar)

Installation Position: Vertical

Operating Temperature Range: 39 to 140 °F (4 to 60 °C) Priming chamber supply restriction (required): 1/8" (3 mm)

Material Standards: Refer to Figure 3

Table 1: Ordering Information and Technical Data for Model VXD Valves									
		Part Numbe			Shipping Weight				
Nominal Size	Groove/	Flange/Flange	Flange/Flange	Friction Loss ¹	C _V Factor	Grooved		Flanged	
0.20	Groove	(ANSI 150)	(PN16)	2000		Lbs.	kg	Lbs.	kg
1½"	23310	Not Available	Not Available	11	53	7	3.1		
2"	23311	Not Available	Not Available	21	74	10	4.5		
2½"	23312	Not Available	Not Available	14	142	22	10		
3"	23313	23314	23315	24	189	28	13	47	21
4"	23316	23317	23318	56	255	60	27	81	37
6"	23319	23320	23321	52	754	97	44	128	58
8"	23322	23323	23324	86	1232	167	76	207	94
10"	23325	23326	23327	107	1991	396	180	470	214
73 mm	24305	Not Available	Not Available	14	142	22	10		-
165 mm	24306	Not Available	Not Available	52	754	97	44		

^{1.} Expressed in equivalent length of pipe based on Hazen & Williams Formula. C-120.

Trim and Accessories

Trim Packages are available for the Model VXD Deluge Valve in several configurations (Refer to the applicable document for the desired system type for more information). The configurations are available as Pre-trimmed Risers (PTR), pre-trimmed (PT), or loose. Additional accessories are available and may be required for system operation or supervision. Refer to the system description and technical data for complete operating and trim requirements for the desired system.



DELUGE VALVE MODEL VXD

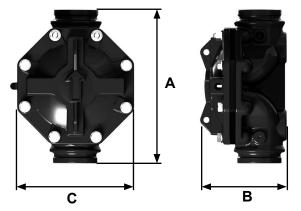


Figure 1: Dimensions - Groove/Groove

Table 2: Model VXD Groove/Groove Valve Dimensions								
Size In (DN)	A In (mm)	B C In (mm)		Weight Lbs. (Kg)				
1½"	8	3-3/4	5	6-3/8				
(DN 40)	(205)	(97)	(127)	(2.9)				
2"	8-3/4	4-3/8	5-1/2	9-7/8				
(DN 50)	(220)	(112)	(140)	(4.5)				
2-1/2"	12	4-7/8	8	22				
(DN 65)	(305)	(122)	(204)	(10)				
3"	12-7/8	6-1/4	9	29-1/4				
(DN 80)	(327)	(158)	(230)	(13.3)				
4"	15-¾	8-1/4	11-7/8	59-½				
(DN 100)	(400)	(212)	(302)	(27)				
6"	18-1⁄4	11-3⁄4	13-1/8	935/8				
(DN 150)	(464)	(300)	(354)	(42.3)				
8"	22-3/8	14-1⁄4	18-1⁄4	166-1⁄4				
(DN 200)	(570)	(364)	(466)	(75.4)				
10"	30-1⁄4	25-1/8	24.2	482				
(DN 250)	(768)	(638)	(616)	(218.6)				

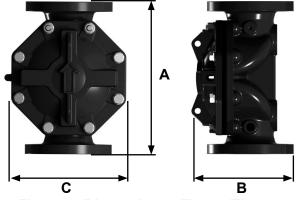


Figure 2: Dimensions - Flange/Flange

Table 3: Model VXD Flange/Flange Valve Dimensions								
Size In (DN)	A In (mm)	B In (mm)	C In (mm)	Weight Lbs (Kg)				
3"	12-7/8	7-1/8	9	47				
(DN 80)	(327)	(200)	(230)	(21.3)				
4"	15-¾	8-7/8	11.9	84				
(DN 100)	(400)	(227)	(302)	(38)				
6"	18-1⁄4	14-3/8	13.9	127¾				
(DN 150)	(464)	(365)	(354)	(56.6)				
8"	22-3/8	16.4	18.3	211-⅓				
(DN 200)	(570)	(416)	(466)	(96)				
10"	30-1⁄4	25-1/8	24.2	482				
(DN 250)	(768)	(638)	(616)	(218.6)				



DELUGE VALVE MODEL VXD

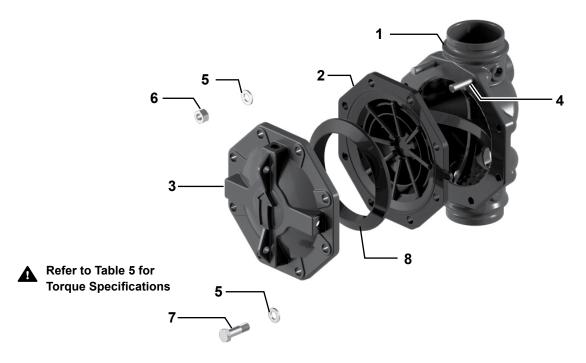


Figure 3: Components (4" Valve Shown)

Table 4: Components and Materials											
Item			Quantity								
	Description	Material	1-1/2"	2"	2-1/2"	3"	4"	6"	8"	10"	
1	Body	Ductile iron with epoxy polyester coating	1	1	1	1	1	1	1	1	
2	Dianhragus	Nitrile butadiene rubber (NBR)	1	1	1	1	1	1	1	1	
2	Diaphragm	Replacement diaphragm kit part number	23780	23781	23782	23783	23784*	23785*	23786*	23787*	
3	Cover	Ductile iron with epoxy polyester coating	1 1 1 1 1				1	1	1	1	
4	Stud	Zinc plated steel		Not used 2 2 2					2	2	
5	Washer	Zinc plated steel	4 4 4 4			8	8	8	16		
6	Nut	Zinc plated steel		Not used			2	2	2	2	
7	Bolt	Zinc plated steel	4	4 4 4 6			6	6	14		
8	V-Ring	Nitrile butadiene rubber (NBR)	Not used 1 1 1 Not used					Not used			

Table 5: Fastener Specifications										
Item	Description -	Valve Size								
iteiii		1-1/2"	2"	2-1/2"	3"	4"	6"	8"	10"	
4	Stud	Not used				M16 x 75	M16 x 85	M20 x 110	M24 x 130	
7	Bolt	M12 x 35	M12 x 40	M16 x 50	M16 x 55	M16 x 50	M16 x 55	M20 x 70	M24 x 80	
Torque	value ft-lb (Nm)	18.4 (25)	22.1 (30)	36.9 (50)	53.8 (73)	64.9 (88)	71.5 (97)	87.0 (118)	118.0 (160)	



DELUGE VALVE MODEL VXD

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

4 INSTALLATION

General Information

- 1. Viking Deluge Valves shall be installed in the vertical position.
- 2. The valve must be installed in an area not subject to freezing temperatures or physical damage.
- 3. The valve must be trimmed according to current Viking Trim Charts and appropriate instructions for the system used. Trim Charts are available on the Viking website, and are provided with trim packages.
- 4. Remove all plastic protectors from the openings of the Deluge Valve.
- 5. Apply a small amount of pipe joint compound or tape to the external threads of all pipe connections required. Take care not to allow any compound, tape, or other foreign matter inside any of the nipples or openings of the valve or trim components.
- 6. Verify that all system components are rated for the water working pressure of the system.
- 7. Hydrostatic Test:

The Model VXD Deluge Valve is manufactured and listed for use at a maximum Water Working Pressure of 250 PSI (17.2 bar). The valve is factory tested at 500 PSI (34.5 bar). The valves may be hydrostatically tested at 300 PSI (20.7 bar) and/ or 50 PSI (3.5 bar) above the normal Water Working Pressure, for limited periods of time (two hours), for the purpose of acceptance by the Authority Having Jurisdiction.

TRIM NOTE: DISCHARGE PIPING FROM THE FLOW TEST VALVE AND ALL SYSTEM DRAINS SHOULD BE KEPT SEPARATE.

- 8. The priming line must be connected upstream of the system water supply main control valve or to a constant source of water at a pressure equal to the system water supply.
- 9. After the Deluge Valve is set, operation of the Deluge Valve requires the release of priming water from the priming chamber. This may be by automatic or manual operation of the release system. Model VXD Deluge Valves are compatible with hydraulic, pneumatic and electric release systems.
 - a. Hydraulic Release Systems: See Figures 12-16 for the maximum allowable elevation of hydraulic release piping above the Deluge Valve. If the maximum height of hydraulic release piping exceeds the limit shown in Figures 12-16 for the valve used, use a Pneumatic or Electric Release System
 - b. Pneumatic Release Systems: A Viking Pneumatic Actuator is required between the release system connection provided on deluge valve trim and pneumatic release Piping.
 - c. Electric Release: Solenoid Valves, System Control Panels, and Electrical Detectors must be compatible. Consult appropriate listing and/or approval guides.

A CAUTION

Operation of Viking Deluge Valves by pressurizing the priming chamber with air pressure or any other pressurized gas is not recommended or approved.

5 OPERATION

The Viking Model VXD Deluge Valve has an inlet chamber, an outlet chamber and a priming chamber. The inlet chamber and outlet chamber are separated from the priming chamber by the diaphragm.

In the set condition:

System pressure is supplied to the priming chamber through a restricted priming line (trim) equipped with a check valve. System water supply pressure trapped in the priming chamber holds the diaphragm in the closed position due to area differential design. The Diaphragm separates the inlet chamber from the outlet chamber, keeping the outlet chamber and system piping dry.

In fire conditions:

When the release system operates, pressure is released from the priming chamber faster than it is supplied through the restricted priming line. Water supply pressure in the inlet chamber forces the diaphragm to open allowing water to flow through the outlet and into the system and alarm devices.

The inlet side of the PORV is connected directly to the top chamber of the deluge valve. In the set position, pressure is supplied to the inlet. The pressure on the push rod prevents water from escaping. When the deluge valve operates, water is drained from the PORV inlet. When the 10:1 differential is overcome, the push rod opens, allowing the prime water to drain. If a release resets, priming water will continue to escape through the PORV, allowing the deluge valve to continue to operate until the system is reset.



DELUGE VALVE MODEL VXD

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058
Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com
Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

6 INSPECTIONS AND MAINTENANCE

NOTICE

The owner is responsible for maintaining the fire protection system and devices in proper operating condition. The Deluge Valve must be kept from freezing conditions and physical damage that could impair its operation.

WARNING

Any system maintenance which involves placing a control valve or detection system out of service may eliminate the Fire Protection capabilities of that system. Prior to proceeding, notify all Authorities Having Jurisdiction. Consideration should be given to employment of a Fire Patrol in the affected areas.

Inspection

It is imperative that the system be inspected and tested on a regular basis. The frequency of the inspections may vary due to contaminated water supplies, corrosive water supplies or corrosive atmospheres. Also, the alarm devices, detection systems or other connected trim may require a more frequent schedule. For minimum maintenance and inspection requirements, refer to NFPA 25. In addition, the Authority Having Jurisdiction may have additional maintenance, testing, and inspection requirements which must be followed. The following recommendations are minimum requirements.

Replacing the Diaphragm (disassembling the valve). Refer to Figure 4.

- 1. Remove the valve from service (refer to the system documentation). Close the main control valve, open the main drain valve. Release the pressure in the priming chamber by opening the emergency release valve.
- 2. Remove trim as required to allow removal of cover (1).
- 3. Remove the bolts and washers as necessary.
- 4. Pull the cover (1) away from body (3).
 - NOTE: 4" through 10" valves include 2 studs; the cover must be pulled off the studs carefully to avoid damage to the threads.
- Lift and remove diaphragm assembly (2) including the V-ring if present.
 NOTE: Do not over-torque the bolts when installing the gasket. Over-tightening can damage the gasket.
- 6. To replace the diaphragm (and V-ring, if present), remove from the body of the valve and install the replacement.
- 7. Clean all parts and surfaces and reassemble the valve.

7 AVAILABILITY

The Viking Model VXD Deluge Valve and accessories are available through a network of Domestic, Canadian, and International Distributors. See the Viking Corporation Web site for your closest distributor or contact The Viking Corporation.

8 GUARANTEES

For details of warranty, refer to Viking's current list price schedule or contact Viking directly.

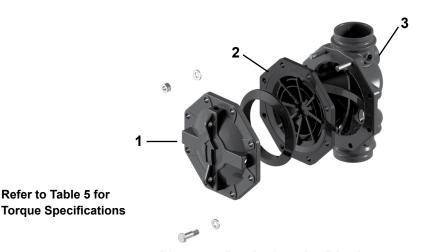


Figure 4: Replacing the Diaphragm

DELUGE VALVE MODEL VXD

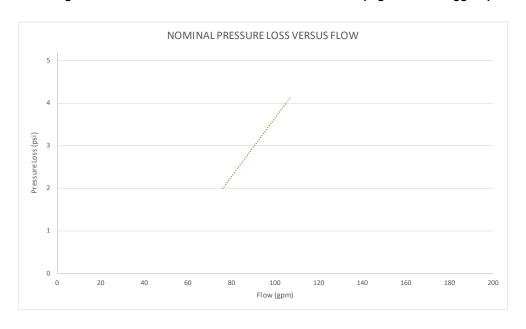


Figure 4: Hydraulic Performance Data (Friction Loss)
1-1/2" Valve

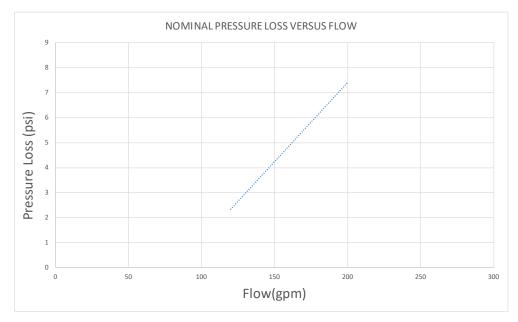


Figure 5: Hydraulic Performance Data (Friction Loss)
2" Valve

DELUGE VALVE MODEL VXD

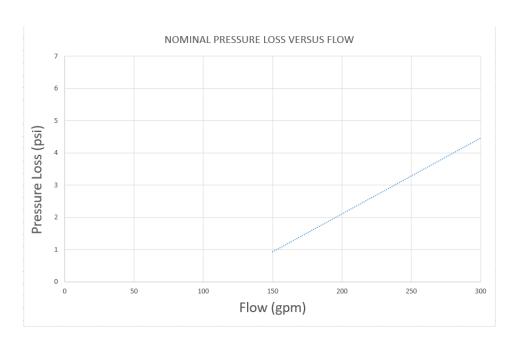


Figure 6: Hydraulic Performance Data (Friction Loss) 2-1/2" Valve

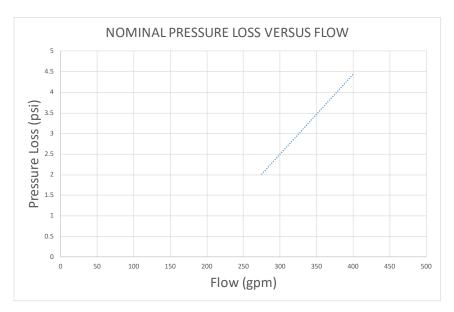


Figure 7: Hydraulic Performance Data (Friction Loss)
3" Valve

DELUGE VALVE MODEL VXD

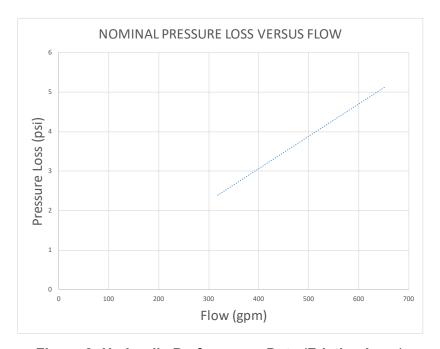


Figure 8: Hydraulic Performance Data (Friction Loss)
4" Valve

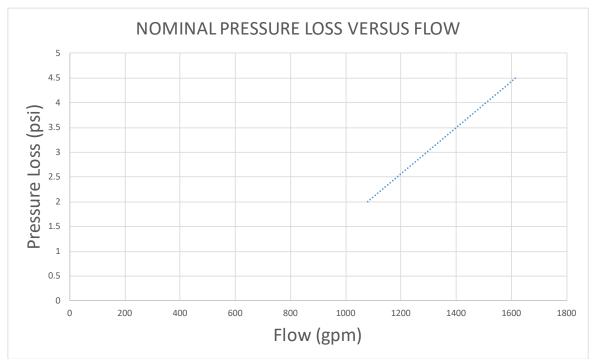


Figure 9: Hydraulic Performance Data (Friction Loss) 6" Valve

DELUGE VALVE MODEL VXD

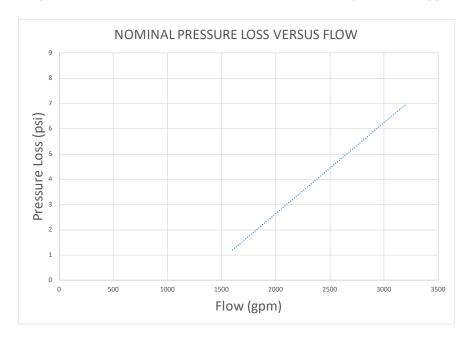


Figure 10: Hydraulic Performance Data (Friction Loss) 8" Valve

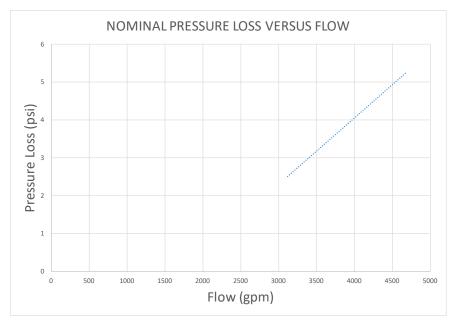


Figure 11: Hydraulic Performance Data (Friction Loss)
10" Valve

DELUGE VALVE MODEL VXD

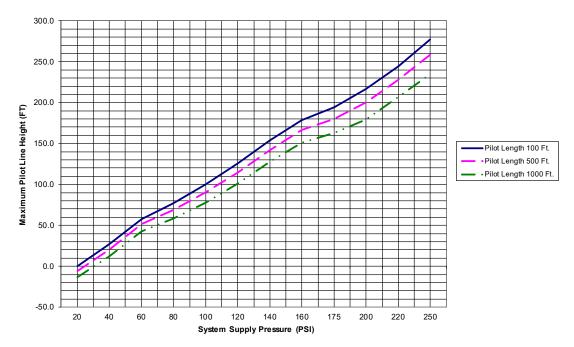


Figure 12: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 1-1/2" Valve

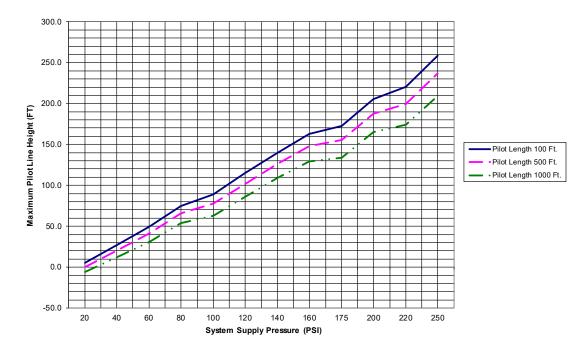


Figure 13: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 2" Valve

DELUGE VALVE MODEL VXD

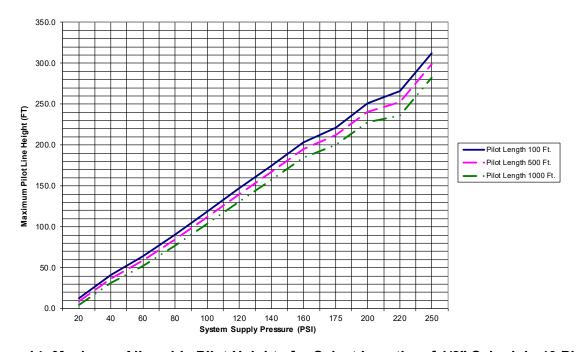


Figure 14: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 2½" Valve

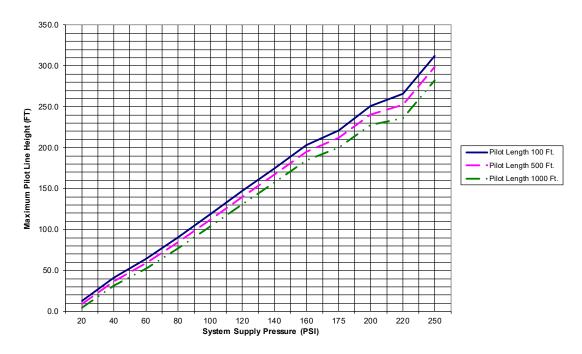


Figure 15: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 3" Valve

DELUGE VALVE MODEL VXD

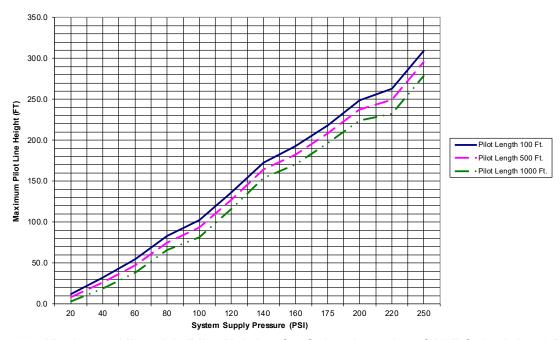


Figure 16: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 4" Valve

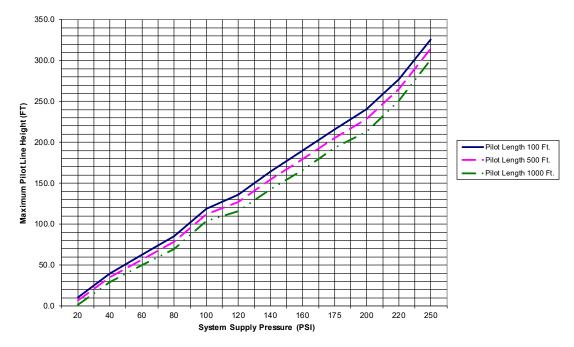


Figure 17: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 6" Valve

DELUGE VALVE MODEL VXD

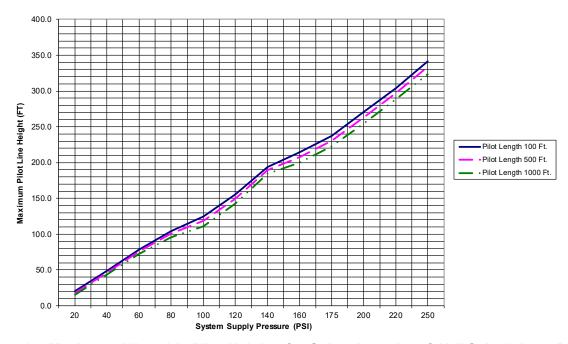


Figure 18: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 8" Valve

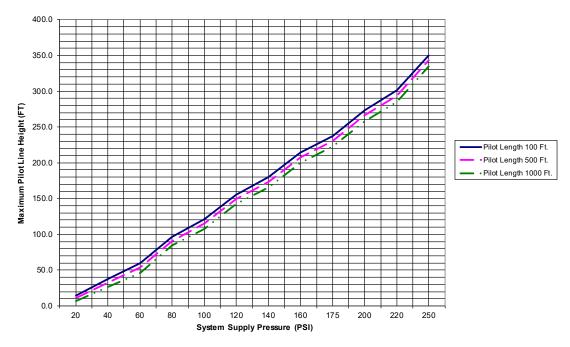


Figure 19: Maximum Allowable Pilot Heights for Select Lengths of 1/2" Schedule 40 Pipe 10" Valve