NIKING®

TECHNICAL DATA

MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

1. DESCRIPTION

The Viking Micromatic® Standard Response Pendent VK102 Sprinkler is a small, thermosensitive, glass-bulb spray sprinkler available in several different finishes and temperature ratings to meet design requirements. The special Polyester, and Electroless Nickel PTFE (ENT) coatings can be used in decorative applications where colors are desired. In addition, these coatings have been investigated for installation in corrosive environments and are listed/approved as indicated in the Approval Charts.

Viking standard response sprinklers may be ordered and/or used as open sprinklers (glass bulb and pip cap assembly removed) on deluge systems. Refer to Ordering Instructions.

2. LISTINGS AND APPROVALS

cULus Listed: Category VNIV

FM Approved: Classes 2001, 2002, 2015, 2017, 2043

VdS VdS Approved: Certificate G414006 & G414004

LPCB Approved

CE: Standard EN 12259-1, DOP_Sprinklers_LPCB_5-2-19 & DOP_VK102WAX_2-12-19

MED Certified: Standard EN 12259-1, EC-certificate 0832-MED-1003

China Approval: Approved according to China GB standard.

UKCA Approved: Standard EN 12259-1; Certificate Number 0832-UKCA-CPR-S5029; UKCA DOC_S5029; 2021

NOTE: Other International approval certificates are available upon request. Refer to Approval Charts and Design Criteria for listing and approval requirements that must be followed.

3. TECHNICAL DATA

Specifications: Minimum Operating Pressure: 7 psi (0.5 bar)* Maximum Working Pressure: 175 psi (12 bar) wwp Factory tested hydrostatically to 500 psi (34.5 bar) Thread size: 1/2" NPT, 15 mm BSPT Nominal K-factor: 5.6 U.S. (80.6 metric**) Glass-bulb fluid temperature rated to -65 °F (-55 °C) Overall Length: 2-1/4" (57 mm)

* cULus Listing, FM Approval, and NFPA 13 installs require a minimum of 7 psi (0.5 bar). The minimum operating pressure for LPCB and CE Approvals ONLY is 5 psi (0.35 bar).

Metric K-factor measurement shown is in Bar. When pressure is measured in kPa, divide the metric K-factor shown by 10.0. **Material Standards:

Frame Casting: Brass UNS-C84400 or QM Brass Deflector: Phosphor Bronze UNS-C51000 (Not for FM Approval) or Copper UNS-C19500 Bulb: Glass, nominal 5 mm diameter Belleville Spring Sealing Assembly: Nickel Alloy, coated on both sides with PTFE Tape Screw: Brass UNS-C36000 Pip Cap and Insert Assembly: Copper UNS-C11000 and Stainless Steel UNS-S30400 For Polyester Coated Sprinklers: Belleville Spring-Exposed For ENT coated Sprinklers: Belleville Spring - Exposed, Screw and Pipcap - ENT plated. Ordering Information: Refer to Table 1

4. INSTALLATION

Refer to appropriate NFPA Installation Standards.

5. OPERATION

During fire conditions, the heat-sensitive liquid in the glass bulb expands, causing the glass to shatter, releasing the pip cap and sealing spring assembly. Water flowing through the sprinkler orifice strikes the sprinkler deflector, forming a uniform spray pattern to extinguish or control the fire.



WARNING: Cancer and Reproductive Harmwww.P65Warnings.ca.gov



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

6. INSPECTIONS, TESTS AND MAINTENANCE


Refer to NFPA 25 for Inspection, Testing and Maintenance requirements.


7. AVAILABILITY

The Viking Micromatic[®] Standard Response Upright Sprinkler VK100 is available through a network of domestic and international distributors. See The Viking Corporation web site for the closest distributor or contact The Viking Corporation.

8. GUARANTEE

For details of warranty, refer to Viking's current list price schedule or contact Viking directly.

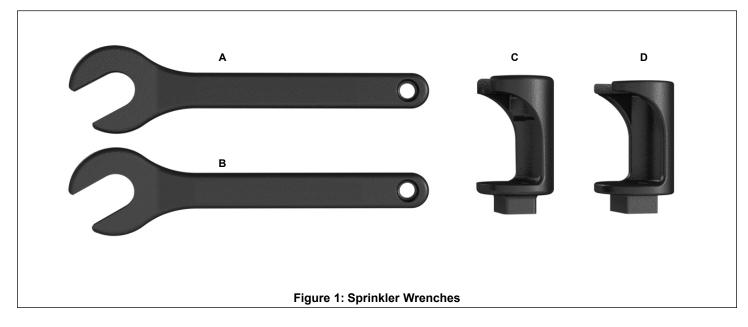

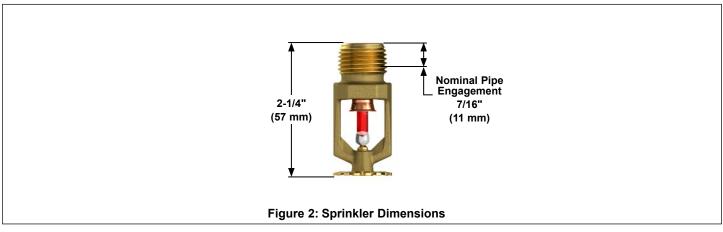



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

TABLE 1: ORDERING INFORMATIONInstructions: Using the sprinkler base part number,(1) add the suffix for the desired Finish(2) add the suffix for the desired Temperature Rating.											
Sprinkler	S	ize	1: Finishes	2: Temperature Ratings							
Base Part No.	NPT Inch	BSPT mm	Description	Suffix ¹	Nominal Rating	Bulb Color	Hazard Classification	Max. Ambient Ceiling Temperature ²	Suffix		
12987	1/2	Brass A 135 °F (57 °C) Orange Ordinary 100 °F (38 °C)									
12989		15	Chrome	F	155 °F (68 °C)	Red	Ordinary	100 °F (38 °C)	В		
20229		15	White Polyester 3,5	M-/W	175 °F (79 °C)	Yellow	Intermediate	150 °F (65 °C)	D		
Black Polyester ^{3,5} M-/B 200 °F (93 °C) Green Intermediate 150 °F (65 °C) E											
Wax C 212 °F (100 °C) Green Intermediate 150 °F (65 °C) M											
	Wax over Polyester V-/W 286 °F (141 °C) Blue High 225 °F (107 °C) G										
ENT ^{3,4,5} JN 360 °F (182 °C) Mauve Extra High 300 °F (149 °C) H											
500 °F (260 °C) Black Ultra High ⁶ 465 °F (240 °C) L											
 area with a maximum ambient temperature of 100 °F (38 °C) meaning if the area will experience temperatures above the maximum ambient rating, you shall use a higher temperature-rated sprinkler. Corrosion Resistant Coatings⁵ White Polyester and Black Polyester in all temperature ratings. ENT in all temperature ratings except 135 °F (57 °C). Wax-Coated Brass and Wax over Polyester⁷ for sprinklers with the following temperature ratings: 155 °F (68 °C) Lt. Brown Wax 175 °F (79 °C) Brown Wax 200 °F (93 °C) Brown Wax 286 °F (141 °C) Dk. Brown Wax⁷ 											
Accessorie	s										
 Sprinkler Wrenches (see Figure 1): A. Standard Wrench: Part No. 21475M/B B. Standard Wrench for Wax Coated Sprinklers: Part No. 10896W/B C. Socket Wrench for Recessed Pendent Sprinklers: Part No. 13655W/B (A 1/2" ratchet is required, not available from Viking) D. Socket Wrench for Wax Coated Sprinklers: Part No. 13577W/B (A 1/2" ratchet is required, not available from Viking) E. Optional Protective Sprinkler Cap Remover/Escutcheon Installer Tool⁹: Part No. 15915 Sprinkler Cabinet: A. Up to 6 sprinklers: Part number 01724A (available since 1971). B. 6-12 Sprinklers: Part number 01725A (available since 1971). 											

Footnotes

- 1. Where a dash (-) is shown in the Finish suffix designation, insert the desired Temperature Rating suffix. See example above.
- ². Based on NFPA 13, NFPA 13R, and NFPA 13D. Other limits may apply, depending on fire loading, sprinkler location, and other requirements of the Authority Having Jurisdiction. Refer to specific installation standards.
- ^{3.} UL Listed as corrosion resistant.
- 4. FM Approved corrosion resistant.
- 5. The corrosion resistant and corrosion proofing coatings have passed the standard corrosion test required by the approving agencies indicated in the Approval Chart(s). These tests cannot and do not represent all possible corrosive environments. Prior to installation, verify through the end-user that the coatings are compatible with or suitable for the proposed environment. For automatic sprinklers, the coatings indicated are applied to the exposed exterior surfaces only. Note that the spring is exposed on sprinklers with Polyester and ENT coatings. For ENT coated automatic sprinklers, the waterway is coated.
- Sprinklers of Ultra-High temperature rating are intended for use inside ovens, dryers, or similar enclosures with normal operating temperatures above 300 °F (149 °C). Where the ambient temperature around the Ultra-High temperature rated sprinkler is significantly reduced below 300 °F (149 °C), response time may be severely retarded.
- 7. Wax melting point is 170 °F (76 °C) for 286 °F (141 °C) temperature rated sprinklers. For more inforamation regarding wax coatings, refer to Bulletin Form No. F_010201.
- 8. Allows use from the floor by attaching a length of 1" diameter CPVC tubing to the tool. Ideal for sprinkler cabinets. Refer to Bulletin F_051808.



MICROMATIC® STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

Approval Chart 1 (UL) Micromatic [®] Standard Response Pendent Sprinkler VK102 Micromatic [®] Standard Response Pendent Sprinkler VK102														
Sprinkler Thread Size Nominal K-factor Overall Length							175 PSI (12 bar) WWP Listings and Approvals ³ (Refer also to UL Design Criteria.)							
Base Part SI Number ¹	SIN	NPT	BSPT	U.S.	metric ²	Inches	mm	cULus⁴	VdS	LPCB	CE ⁸	MED ⁹	China Approval	UKCA ¹²
12987	VK102	1/2" 15 mm 56 806 2-1/4" 57 8 1 A1 A1 B3 B1Y F1 G1Y B42 F2X 1									A1, B3, B1Y			
12989	VK102		15 mm	5.6	80.6	2-1/4"	57	A1, B3, B1Y, C4, D2, E5, G5Z	A1	A1, B3, B1Y	F1, G1Y, B4 ¹²	F2X		A1, B3, B1Y
20229 ¹⁰	VK102		15 mm	5.6	80.6	2-1/4"	57	E6					E6	
	I		I	1		NOTICE	- Pr <u>odu</u>	ct Below - No lo	nger of	fered.	<u> </u>		I	
10139	NOTICE - Product Below - No longer offered. 10139 VK102 1/2" 15 mm 5.6 80.6 2-1/4" 57 A1, B3, B1Y, C4, D2, E5, G5Z													
10173	VK102		15 mm	5.6	80.6	2-1/4"	57	A1, B3, B1Y, C4, D2, E5, G5Z	A1	A1, B3, B1Y		F2X		
18020	VK102	1/2"	15 mm	5.6	80.6	2-1/4"	57	A1, B3, B1Y, C4, D2, E5, G5Z	A1	A1, B3, B1Y	F1, G1X	F2X		
F = 155 °F (68 °C), 175 °F (79 °C), 200 °F (93 °C), 286 °F (141 °C), and 360 °F (182 °C) G = 155 °F (68 °C), 175 °F (79 °C), and 200 °F (93 °C) Approved Finish Codes 1 = Brass, Chrome, White Polyester ^{5,6} and Black Polyester ^{5,6} 2 = Brass and Chrome 3 = Wax-Coated Brass and Wax Over Polyester ⁵ 4 = High Temperature 200 °F (93 °C) Wax Coating (corrosion resistant); maximum ambient temperature allowed at ceiling = 150 °F (65 °C) 5 = ENT ⁵										;)				
6 = Chro Approved		cheo	n Code	S										
 X = Recessed with the Viking Model E-1, E-2, or E-3 Recessed Escutcheon Y = Standard surface-mounted escutcheon or recessed with the Viking Model E-1, E-2, or E-3 Recessed Escutcheon Z = Standard surface-mounted escutcheon or recessed with the Viking Model E-1 Recessed Escutcheon 														
Footnotes	Footnotes													
 Metric K-f This table Listed by cULus Lis Other colo Sprinklers Where the temperatu CE: Stance 	actor sho shows th Underwrit ted as co ors are av of Ultra- e ambient re rated s lard EN 1	wn is fo le listing ters Lal rrosion railable High te tempe sprinkle 2259-1	or use who gs and ap boratories resistant. on reque: mperature erature arc er may be , EC-certi	en press provals Inc. for st with the rating so ound the severely ficate of	sure is mea available a use in the ne same Li- are intende Ultra-High y retarded. i conformity	sured in ba t the time o U.S. and C stings and A d for use in temperatu	r. When f printing anada. Approvals iside ove re rated	Irrent price schedule pressure is measure I. Check with the ma s as the standard co ens, dryers, or simila sprinkler is significa ED-1003 and 0832-I	ed in kPa anufactur blors. ar enclos antly redu	rer for any additi sures with norma uced below 300	onal approvals. I operating tempe	ratures	above 300 °F	• • •

- MED Certified, Standard EN 12259-1, EC-certificate of conformity 0832-MED-1003
- 10. Approved according to China GB standard.

11 CE: Standard EC 12259-1, Declaration of Performance DOP_Sprinklers_LPCB_5-2-19 & DOP_VK102WAX_2-12-19

12 UKCA Approved: Standard EN 12259-1; Certificate Number 0832-UKCA-CPR-S5029; UKCA DOC_S5029; 2021



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

		Micr	omatic [®] St	andard R	al Chart esponse Po 175 PSI (12	endent Spr	inkler VK	Temperature KEY Finish A1X ← Escutcheon (if applicable)				
Sprinkler Base	CINI	Thread Size		Nomina	Nominal K-Factor		ength	FM Approvals ³				
Part Number ¹	SIN	NPT	BSPT	U.S.	metric ²	Inches	mm	(Refer also to Design Criteria below.)				
12987	2987 VK102 1/2" 15 mm 5.6 80.6 2-1/4" 57 A1, B2, C3, D1, E4, G1Y, G4											
12989	VK102		15 mm	5.6	80.6	2-1/4"	57	A1, B2, C3, D1, E4, G1Y, G4Z				
202297	VK102		15 mm	5.6	80.6	2-1/4"	57	E5				
		NOTICE -	Product Bel	low - Limite	ed Availabili	ty (Contact I	Local Vikir	ng Office)				
10139	VK102	1/2"	15 mm	5.6	80.6	2-1/4"	57	A1, B2, C3, D1, E4, G1Y, G4Z				
10173	VK102		15 mm	5.6	80.6	2-1/4"	2-1/4" 57 A1, B2, C3, D1, E4, G1Y, G4Z					
18020	VK102	1/2"	15 mm	5.6	80.6	2-1/4"	57	A1, B2, C3, D1, G1Y				
F = 135 °F (57 °C) $G = 155 °F (68 °C)$ $Approved Finish$ $1 = Brass, Chrom$ $2 = Wax-Coated$ $3 = High Tempera$	C), 175 °F (79 Codes ne, White Poly Brass (corros	9 °C), and 2 yester ^{5,6} and sion resistant	00 °F (93 °C Black Polye	ster ^{5,6}		um ambient :	temperatur	e allowed at the ceiling = 150 °F (65 °C)				
4 = ENT ⁶ 5 = Chrome												
Approved Escut	cheon Cod	es										
Y = Standard sur Z = Standard sur					0							
Footnotes												
Footnotes 1. Base part number 2. Metric K-factor sh	r is shown. Fo own is for us	or complete e when pres	part number, sure is meas	refer to Vik sured in bar	king's current	price schedu sure is measu	ıle. ıred in kPa	, divide the metric K-factor shown by er for any additional approvals.				

Other colors are available on request with the same Approvals as the standard colors.

Sprinklers of Ultra-High temperature rating are intended for use inside ovens, dryers, or similar enclosures with normal operating temperatures above 300 °F (149 °C). Where the ambient temperature around the Ultra-High temperature rated sprinkler is significantly reduced below 300 °F (149 °C), the response time of the Ultra-High temperature rated sprinkler may be severely retarded.

• FM approved as corrosion resistant.

7 Approved according to China GB standard.



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

DESIGN CRITERIA - UL (Also refer to Approval Chart 1.)

cULus Listing Requirements:

The Viking Micromatic[®] Standard Response Pendent Sprinkler VK102 is cULus Listed as indicated in Approval Chart 1 for installation in accordance with the latest edition of NFPA 13 for standard spray sprinklers.

- Designed for use in Light, Ordinary, and Extra Hazard occupancies.
- The sprinkler installation rules contained in NFPA 13 for standard spray pendent sprinklers must be followed.
- Venting is not required.

IMPORTANT: Always refer to Bulletin Form No. F_091699 - Care and Handling of Sprinklers. Also refer to Form No. F_080614 for general care, installation, and maintenance information. Viking sprinklers are to be installed in accordance with the latest edition of Viking technical data, the appropriate standards of NFPA, LPCB, APSAD, VdS or other similar organizations, and also with the provisions of governmental codes, ordinances, and standards, whenever applicable.

DESIGN CRITERIA - FM (Also refer to Approval Chart 2.)

FM Approval Requirements:

The Viking Micromatic[®] Standard Response Pendent Sprinkler VK102 is is FM Approved as standard response **Non-Storage** pendent sprinkler as indicated in the FM Approval Guide. For specific application and installation requirements, reference the latest applicable FM Loss Prevention Data Sheets (including Data Sheet 2-0). FM Global Loss Prevention Data Sheets contain guidelines relating to, but not limited to: minimum water supply requirements, hydraulic design, ceiling slope and obstructions, minimum and maximum allowable spacing, and deflector distance below the ceiling.


NOTE: The FM installation guidelines may differ from cULus and/or NFPA criteria.

IMPORTANT: Always refer to Bulletin Form No. F_091699 - Care and Handling of Sprinklers. Also refer to Form No. F_080614 for general care, installation, and maintenance information. Viking sprinklers are to be installed in accordance with the latest edition of Viking technical data, the appropriate standards of NFPA, FM Global, LPCB, APSAD, VdS or other similar organizations, and also with the provisions of governmental codes, ordinances, and standards, whenever applicable.



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)


The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

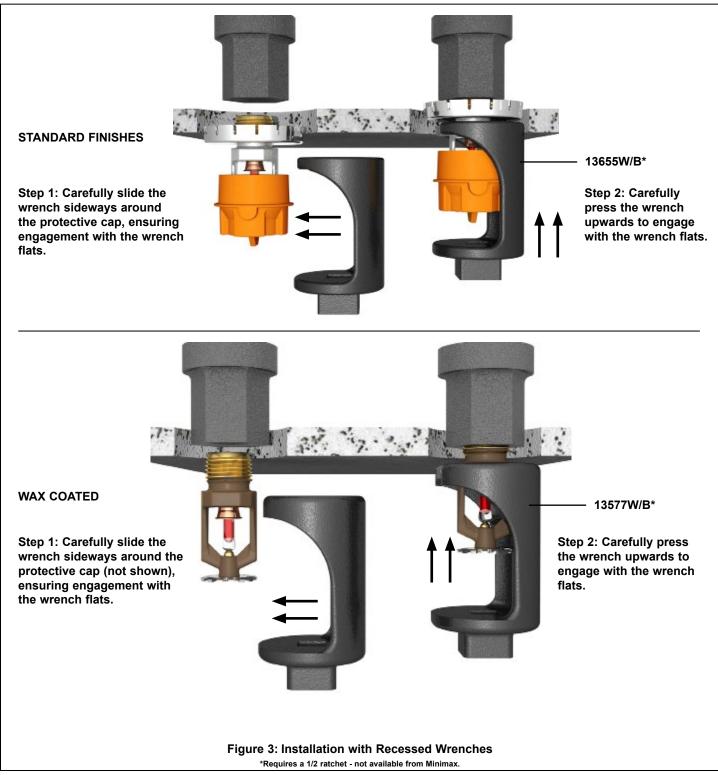



MICROMATIC[®] STANDARD RESPONSE PENDENT SPRINKLER VK102 (K5.6)

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

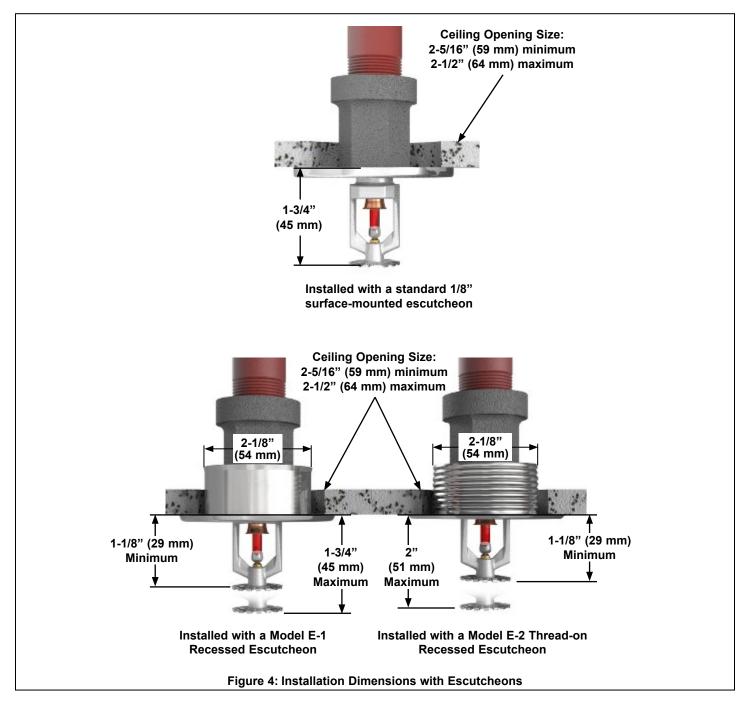



CARE AND HANDLING OF SPRINKLERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

SPRINKLERS ARE FRAGILE - HANDLE WITH CARE!

General Handling and Storage:

· Store sprinklers in a cool, dry place.

- Protect sprinklers during storage, transport, handling, and after installation.
- Use the original shipping containers. DO NOT place sprinklers loose in boxes, bins, or buckets.
- · Keep sprinklers separated at all times. DO NOT allow metal parts to contact sprinkler operating elements.

For Pre-Assembled Drops:

- · Protect sprinklers during handling and after installation.
- For recessed assemblies, use the protective sprinkler cap (Viking Part Number 10364).

Sprinklers with Protective Shields or Caps:

- · DO NOT remove shields or caps until after sprinkler installation and there no longer is potential for mechanical damage to the sprinkler operating elements.
- · Sprinkler shields or caps MUST be removed BEFORE placing the system in service!
- Remove the sprinkler shield by carefully pulling it apart where it is snapped together.
- Remove the cap by turning it slightly and pulling it off the sprinkler.

Sprinkler Installation:

- · DO NOT use the sprinkler deflector or operating element to start or thread the sprinkler into a fitting.
- · Use only the designated sprinkler head wrench! Refer to the current sprinkler technical data page to determine the correct wrench for the model of sprinkler used.
- · DO NOT install sprinklers onto piping at the floor level.
- Install sprinklers after the piping is in place to prevent mechanical damage.
- DO NOT allow impacts such as hammer blows directly to sprinklers or to fittings, pipe, or couplings in close proximity to sprinklers. Sprinklers can be damaged from direct or indirect impacts.
- · DO NOT attempt to remove drywall, paint, etc., from sprinklers.
- Take care not to over-tighten the sprinkler and/or damage its operating parts! Maximum Torque:

1/2" NPT:	14 ft-lbs. (19.0 N-m)
3/4" NPT:	20 ft-lbs. (27.1 N-m)
1" NPT:	30 ft-lbs. (40.7 N-m)



CORRECT INCORRECT

(Protected with caps)

(Protective caps not used)



CORRECT (Piping is in place at the ceiling)

INCORREC1 (Sprinkler at floor level)



CORRECT (Special installation wrenches)

INCORRECT (Designated wrench not

used)



Any sprinkler with a loss of liquid from the glass bulb or damage to the fusible element should be destroyed. Never install sprinklers that have been dropped, damaged, or exposed to temperatures exceeding the maximum ambient temperature allowed. Sprinklers that have been painted in the field must be replaced per NFPA 13. Protect sprinklers from paint and paint overspray in accordance with the installation standards. Do not clean sprinklers with soap and water, ammonia, or any other cleaning fluid. Do not use adhesives or solvents on sprinklers or their operating elements.

Refer to the appropriate technical data page and NFPA standards for complete care, handling, installation, and maintenance instructions. For additional product and system information Viking data pages and installation instructions are available on the Viking Web site at www.vikinggroupinc.com.





CARE AND HANDLING OF SPRINKLERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

PROTECTIVE SPRINKLER SHIELDS AND CAPS

General Handling and Storage:

Many Viking sprinklers are available with a plastic protective cap or shield temporarily covering the operating elements. The snapon shields and caps are factory installed and are intended to help protect the operating elements from mechanical damage during shipping, storage, and installation. NOTE: It is still necessary to follow the care and handling instructions on the appropriate sprinkler technical data sheets* when installing sprinklers with bulb shields or caps.

WHEN TO REMOVE THE SHIELDS AND CAPS:

NOTE: SHIELDS AND CAPS MUST BE REMOVED FROM SPRINKLERS BEFORE PLACING THE SYSTEM IN SERVICE!

Remove the shield or cap from the sprinkler only after checking all of the following:

• The sprinkler has been installed*.

• The wall or ceiling finish work is completed where the sprinkler is installed and there no longer is a potential for mechanical damage to the sprinkler operating elements.

SHIELDS AND CAPS MUST BE REMOVED FROM SPRINKLERS BEFORE PLACING THE SYSTEM IN SERVICE!



Figure 1: Sprinkler shield being removed from a pendent sprinkler.



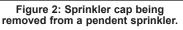





Figure 3: Sprinkler cap being removed from and upright sprinkler.

HOW TO REMOVE SHIELDS AND CAPS:

No tools are necessary to remove the shields or caps from sprinklers. DO NOT use any sharp objects to remove them! **Take care not to cause mechanical damage to sprinklers when removing the shields or caps.** When removing caps from fusible element sprinklers, use care to prevent dislodging ejector springs or damaging fusible elements. NOTE: Squeezing the sprinkler cap excessively could damage sprinkler fusible elements.

- To remove the shield, simply pull the ends of the shield apart where it is snapped together. Refer to Figure 1.
- To remove the cap, turn it slightly and pull it off the sprinkler. Refer to Figures 2 and 3.

NOTICE Refer to the current sprinkler technical data page to determine the correct sprinkler wrench for the model of sprinkler used.

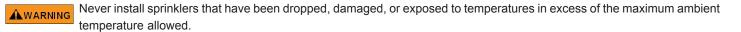

* Refer to the appropriate current technical data pages for complete care, handling, and installation instructions. Data pages are included with each shipment from Viking or Viking distributors. They can also be found on the Web site at www. vikinggroupinc.com.



CARE AND HANDLING OF SPRINKLERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

ACAUTION CONCEALED COVER ASSEMBLIES ARE FRAGILE! TO ASSURE SATISFACTORY PERFORMANCE OF THE PRODUCT, HANDLE WITH CARE.



(Pendent Cover 12381 shown)



GENERAL HANDLING AND STORAGE INSTRUCTIONS:

- Do not store in temperatures exceeding 100 °F (38 °C). Avoid direct sunlight and confined areas subject to heat.
- Protect sprinklers and cover assemblies during storage, transport, handling, and after installation.
- -- Use original shipping containers.
- -- Do not place sprinklers or cover assemblies loose in boxes, bins, or buckets.
- Keep the sprinkler bodies covered with the protective sprinkler cap any time the sprinklers are shipped or handled, during testing of the system, and while ceiling finish work is being completed.
- Use only the designated Viking recessed sprinkler wrench (refer to the appropriate sprinkler data page) to install these sprinklers. NOTE: The protective cap is temporarily removed during installation and then placed back on the sprinkler for protection until finish work is completed.
- Do not over-tighten the sprinklers into fittings during installation.
- Do not use the sprinkler deflector to start or thread the sprinklers into fittings during installation.
- · Do not attempt to remove drywall, paint, etc., from the sprinklers.
- Remove the plastic protective cap from the sprinkler before attaching the cover plate assembly. PROTECTIVE CAPS MUST BE REMOVED FROM SPRINKLERS BEFORE PLACING THE SYSTEM IN SERVICE!

Refer to the appropriate current technical data pages for complete care, handling, and installation instructions. Data pages are included with each shipment from Viking or Viking distributors. They can also be found on the Web site at www. vikinggroupinc.com.

NIKING

BULLETIN

CARE AND HANDLING OF SPRINKLERS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058

Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com

USE THE FOLLOWING PRECAUTIONS WHEN HANDLING WAX-COATED SPRINKLERS

Many of Viking's sprinklers are available with factory-applied wax coating for corrosion resistance. These sprinklers MUST receive appropriate care and handling to avoid damaging the wax coating and to assure satisfactory performance of the product.

General Handling and Storage of Wax-Coated Sprinklers:

- Store the sprinklers in a cool, dry place (in temperatures below the maximum ambient temperature allowed for the sprinkler temperature rating. Refer to Table 1 below.)
- · Store containers of wax-coated sprinklers separate from other sprinklers.
- Protect the sprinklers during storage, transport, handling, and after installation.
- Use original shipping containers.
- · Do not place sprinklers in loose boxes, bins, or buckets.

Installation of Wax-Coated Sprinklers:

Use only the special sprinkler head wrench designed for installing wax-coated Viking sprinklers (any other wrench may damage the unit).

- Take care not to crack the wax coating on the units.
- For touching up the wax coating after installation, wax is available from Viking in bar form. Refer to Table 1 below. The coating MUST be repaired after sprinkler installation to protect the corrosion-resistant properties of the sprinkler.
- Use care when locating sprinklers near fixtures that can generate heat. Do not install sprinklers where they would be exposed to temperatures exceeding the maximum recommended ambient temperature for the temperature rating used.
- Inspect the coated sprinklers frequently soon after installation to verify the integrity of the corrosion resistant coating. Thereafter, inspect representative
 samples of the coated sprinklers in accordance with NFPA 25. Close up visual inspections are necessary to determine whether the sprinklers are being
 affected by corrosive conditions.

TABLE 1										
Sprinkler Temperature Rating (Fusing Point)	Wax Part Number	Wax Melting Point	Maximum Ambient Ceiling Temperature ¹	Wax Color						
155 °F (68 °C) / 165 °F (74 °C)	02568A	148 °F (64 °C)	100 °F (38 °C)	Light Brown						
175 °F (79 °C)	04146A	161 °F (71 °C)	150 °F (65 °C)	Brown						
200 °F (93 °C)	04146A	161 °F (71 °C)	150 °F (65 °C)	Brown						
220 °F (104 °C)	02569A	170 °F (76 °C)	150 °F (65 °C)	Dark Brown						
286 °F (141 °C)	02569A	170 °F (76 °C)	150 °F (65 °C)	Dark Brown						
¹ Based on NEPA-13. Other limits may apply depending on fire loading, sprinkler location, and other requirements of the Authority Having										

Based on NFPA-13. Other limits may apply, depending on fire loading, sprinkler location, and other requirements of the Authority Having Jurisdiction. Refer to specific installation standards.

Never install sprinklers that have been dropped, damaged, or exposed to temperatures in excess of the maximum ambient temperature allowed.

Refer to the appropriate current technical data pages for complete care, handling, and installation instructions. Data pages are included with each shipment from Viking or Viking distributors. They can also be found on the Web site at www. vikinggroupinc.com.



REGULATORY AND HEALTH WARNINGS

The Viking Corporation, 210 N Industrial Park Drive, Hastings MI 49058 Telephone: 269-945-9501 Technical Services: 877-384-5464 Fax: 269-818-1680 Email: techsvcs@vikingcorp.com Visit the Viking website for the latest edition of this technical data page www.vikinggroupinc.com

1. DESCRIPTION

Regulatory and Health Warnings applying to materials used in the manufacture and construction of fire protection products are provided herin as they relate to legally mandated jurisdictional regions.

WARNING

STATE OF CALIFORNIA, USA

Installing or servicing fire protection products such as sprinklers, valves, piping etc. can expose you to chemicals including, but not limited to, lead, nickel, butadiene, titaninum dioxide, chromium, carbon black, and acrylonitrile which are known to the State of California to cause cancer or birth defects or other reproductive harm.

For more information, go to www.P65Warnings.ca.gov

2. WARRANTY TERMS AND CONDITIONS

For details of warranty, refer to Viking's current list price schedule at www.vikinggroupinc.com or contact Viking directly.